

Digital Name Plate

OWNER'S MANUAL — Please read before using this equipment.

Your RadioShack Digital Name Plate has a two-sided display and is perfect for use on a desk. The front display can show your name and other programmed messages (or two different programmed messages), and the back display shows the current time and the temperature. You can also place your business cards in the top slot.

The name plate's features include:

Two-Message Display — allows you to display preset and programmed messages.

 
Time Display — shows you the date, day of the week, and time at a glance, through the year 2099.

Temperature Display — lets you see the temperature in Fahrenheit or Celsius.

Six Preset Messages Setting — lets you select up to six alternating preset messages (out of the total 47 preset messages), such as Good Morning, Happy Birthday, and Good Luck.

Top Slot Card Holder — is a convenient place to store your business cards.

Three Programmed Messages Setting — lets you display up to three messages you program yourself.



Card Holder — holds business cards.

SEL (MESSAGE) — press to select the preset message or programmed message




► — press to choose up to six preset messages (in ascending order), or to position the cursor (to the right) when setting the programmed message.

◄ — press to choose up to six preset messages (in descending order), or to position the cursor (to the left) when setting the programmed message.

CHAR — press to toggle between uppercase and lowercase letters.

— — press to scroll through the character list (or preset message list) backward.

+ — press to scroll through the character list (or preset message list) forward.

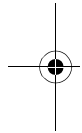

++ — press to select whether to enter letters, numbers, or symbols.



DEL — press to delete a previous preset or programmed message.

SET (CLOCK) — press to set the year, month, date, hour, and minute.

SEL (CLOCK) — press to select the year, month, date, hour, and minute digits.

C/F — press to select the temperature format (Celsius or Fahrenheit).

RESET — press to reset the name plate.

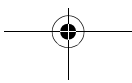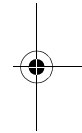

INSTALLING THE BATTERIES

The name plate requires four AAA batteries (not supplied) for power. For the best performance and longest life, we recommend RadioShack alkaline batteries.

Cautions:

- Use only fresh batteries of the required size and recommended type.
- Do not mix old and new batteries, different types of batteries (standard, alkaline, or rechargeable), or rechargeable batteries of different capacities.

Follow these steps to install batteries.

1. Pull the tab on the battery compartment cover at the bottom of the name plate to remove the cover.
2. Place the batteries in the compartment as indicated by the polarity symbols (+ and -) marked inside.
3. Replace the cover.

If the name plate does not operate after installing batteries, use a pointed object (such as a straightened paperclip) to press **RESET**.

When the display dims or the name plate stops operating properly, replace the batteries.

Warning: Dispose of old batteries promptly and properly. Do not burn or bury them.

Caution: If you do not plan to use the name plate for a month or longer, remove the batteries. Batteries can leak chemicals that can destroy electronic parts.

SELECTING THE PRESET MESSAGES

Follow these steps to select up to six preset messages (out of 47 messages in all) that you want to display on the name plate.

1. Hold down **SET** (on the **MESSAGE** control panel). **MESSAGE 1** flashes, then the cursor flashes.
2. Press **SEL** (on the **MESSAGE** control panel). **PRESET 1** appears briefly, then the cursor flashes.
3. Repeatedly press (or hold down) **+** or **-** to scroll through the messages.

Note: The name plate automatically selects the current message as your desired message if you do not press a button for about 8 seconds.

4. When the desired message appears, press **SET**. **PRESET 2** flashes, then the cursor flashes.
5. Repeat Steps 3 and 4 to set messages 2–6.

After setting the desired preset messages, wait about 5 seconds until the messages appear sequentially. Each message stays on the display for about 3 seconds. If you only select one preset message, it appears steadily on the display.

DELETING/CHANGING PRESET MESSAGES

1. Hold down **SET**. **PRESET 1** flashes, then the previous preset message flashes.

Note: If **MESSAGE 1** flashes after you press **SET**, press **SEL** once (within 5 seconds) so **PRESET 1** flashes.

2. Repeatedly press ◀ or ▶ so the message you want to delete or change appears.
3. To delete the message, press **DEL** once. The cursor flashes. Wait about 5 seconds. The name plate returns to display mode.

To select a different message, repeatedly press + or - to scroll through the messages until the desired message appears. Wait about 5 seconds. The name plate returns to display mode.

PROGRAMMING MESSAGES

Follow these steps to program up to three messages (40 character maximum, including letters, numbers, and symbols).

If you enter only one programmed message (such as your name, for example), up to 16 characters long, it will appear continuously, rather than scroll across the display.

1. Hold down **SET**. **MESSAGE 1** flashes, then the cursor flashes.

Note: If **PRESET 1** flashes after you press **SET**, press **SEL** once (within 5 seconds) so **MESSAGE 1** flashes.

2. Repeatedly press **++** to select letters, numbers, or symbols.
3. Repeatedly press (or hold down) **+** or **-** to select the desired character.

Notes:

- Repeatedly press **◀** or **▶** to position the cursor as desired.
- To enter either an uppercase letter or a lowercase letter, repeatedly press **CHAR**.
- The name plate automatically saves the current input as the desired message if you do not press a button for 8 seconds.

4. Press **SET**. **MESSAGE 2** flashes, then the cursor flashes.
5. Repeat Step 2–4 to set another message.

After setting the desired programmed messages, wait about 5 seconds. The messages move sequentially across the lower display from right to left.

DELETING/EDITING THE PROGRAMMED MESSAGE

1. Hold down **SET**. **MESSAGE 1** flashes, then the first character of the previous preset message flashes.

Note: If **PRESET 1** flashes after you press **SET**, press **SEL** once (within 5 seconds) so **MESSAGE 1** flashes.

2. Repeatedly press **SET** until the message you want to delete or change appears.
3. To delete the message, hold down **DEL** for about 2 seconds so the cursor flashes. Wait about 8 seconds. The name plate returns to display mode.

To program a new message, follow Steps 2 and 3 in “Programming Messages” on Page 6.

To edit the message, repeatedly press ◀ or ▶ to position the cursor. Press **DEL** to delete a character or repeatedly press + or – to select another character. Repeatedly press ++ to select letters, numbers, or characters.

SETTING THE CLOCK

The name plate shows the current time, date, and temperature on the back display. When you install the batteries, **12:00**, **Sat**, **1/1**, and the current temperature appear.

Follow these steps to set the clock.

1. Hold down **SET** (on the **CLOCK** control panel) until the year digits flash.
2. Repeatedly press (or hold down) **SEL** (on the **CLOCK** control panel) to set the year.
3. Press **SET**. The month digit flashes.
4. Repeatedly press (or hold down) **SEL** to set the month.
5. Press **SET**. The date digit flashes.

6. Repeatedly press (or hold down) **SEL** to set the date.
7. Press **SET**. The current temperature remains on the display, the hour and minute appear, and the hour digits flash.
8. Repeatedly press (or hold down) **SEL** to set the hour.
Note: **PM** appears for PM hours.
9. Press **SET**. The minute digits flash.
10. Repeatedly press (or hold down) **SEL** to set the minute.
11. Press **SET**. The time, date, day of the week, and current temperature appear.

Note: You can display the time in either 12- or 24-hour format. To change the hour format, hold down **SEL** for 2 to 3 seconds. In 12-hour format, **PM** appears during the PM hours.

CHANGING THE TEMPERATURE FORMAT

You can select the temperature display format (either Fahrenheit or Celsius). To change the format at any time, repeatedly press **C/F** (in the **CLOCK** control panel) so the clock displays the desired format.

RESETTING THE NAME PLATE

If the name plate stops operating properly or the display locks up, you can reset it. To reset the name plate, use a pointed object (such as a straightened paper clip) to press **RESET**.






CARE

To enjoy your RadioShack Digital Name Plate for a long time:

- Keep the name plate dry. If it gets wet, wipe it dry immediately.
- Use and store the name plate only in normal temperature environments.
- Handle the name plate gently and carefully. Do not drop it.
- Keep the name plate away from dust and dirt.
- Wipe the name plate with a damp cloth occasionally to keep it looking new.

Modifying or tampering with the name plate's internal components can cause a malfunction and might invalidate its warranty. If your name plate is not performing as it should, take it to your local RadioShack store for assistance.

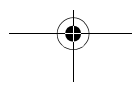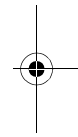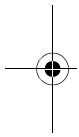

SPECIFICATIONS

Power Source	4 AAA Alkaline Batteries
Battery Life	About 10 Months
Time Accuracy	+/- 0.67 sec/day
Operating Temperature	32° to 109° F (0° to 43° C)
Dimensions (HWD)	$2\frac{5}{16} \times 7\frac{1}{16} \times 2\frac{3}{16}$ in (59 × 180 × 56 mm)
Weight	8.38 oz (237.6 g)

Specifications are typical; individual units might vary. Specifications are subject to change and improvement without notice.

Limited One-Year Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for one (1) year from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

We Service What We Sell

12/99

RadioShack Corporation
Fort Worth, Texas 76102

63-1006
06A00
Printed in Hong Kong